

Please use CTRL + "F" to search model.

ASUS System Control Interface v1 Support list
B9440FA
E203MA
E203MAH
E203MAS
E406MA
E406MAS
FX505DY
FX505GD
FX505GE
FX505GM
FX705DY
FX705GD
FX705GE
FX705GM
G703GX
G703GXR
GL10CS
GL12CS
GL12CX
GL12CX-C
GL504GM
GL504GS
GL504GV
GL504GW
GL704GM
GL704GMC
GL704GS
GL704GSC
GL704GV
GL704GW
GU502GU
GU502GV
GU502GW
GX502GV
GX502GW
GX502GWH
GX531GM
GX531GS
GX531GV
GX531GVH
GX531GVR
GX531GW
GX531GWH
GX531GWR
GX531GX
GX531GXH
GX531GXR
GX701GV
GX701GVR
GX701GW
GX701GWR

GX701GX
GX701GXH
GX701GXR
GZ700GX
GZ700GXH
I330UA
I330UN
I403FA
P2540UBP
P5240FA
P5240FF
P5340FA
P5340FF
P5440FA
P5440FAI
P5440FF
P5440FFI
Q326FA
Q406FA
Q536FD
TP203MAH
TP401CAE
TP401CAS
TP401MA
TP401MAS
UX331FAL
UX331FN
UX333FA
UX333FN
UX362FA
UX391FA
UX392FA
UX392FN
UX431FA
UX431FN
UX433FA
UX433FN
UX450FD
UX450FDX
UX461FA
UX461FN
UX462FA
UX533FD
UX533FN
UX562FD
X330FA
X330FN
X330UA
X330UN
X403FA
X406UAS
X407UAR

X407UBR
X407UF
X411UAO
X411UAS
X412UA
X412UB
X412UF
X420UA
X430FA
X430FN
X430UA
X430UF
X430UN
X441UAR
X441UBR
X510UAD
X510UAO
X510UFD
X510UFO
X512UA
X512UB
X512UF
X530FA
X530FN
X530UA
X530UAO
X530UF
X530UFO
X530UN
X530UNO
X540BA
X540BP
X555QAT
X555QGT
X560UD
X570ZD
X580GD
X705FD
X705FN
Z272SD